


Cleaning the Media Guide

Excess ink on the Media Guide can affect print quality.

1. Remove the printhead. See [Replacing the Printhead](#) on page 49.
2. [Open the clamshell](#) to its highest position.
3. Slide the white plastic Media Guide to the right. When it will not move further, gently pull down on the guide.

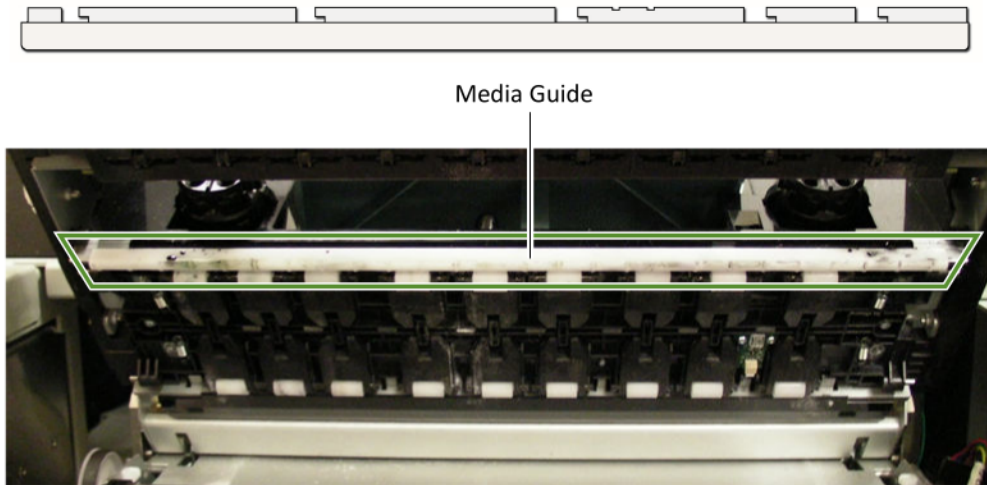

4. Clean any ink residue from the Media Guide by rinsing with water and drying thoroughly.
5. Line the Media Guide slots up with the metal tabs on the bottom of the clamshell and push the guide back on. Slide guide to the left until it stops.
6. [Close the Clamshell](#).
7. Reinstall the printhead and close the top cover.