

Afinia Rewinder

Spring removal

Right side – AC power switch side

1. Confirm power is turned off to the unit and disconnect the power cable from the rewinder.
2. Remove 4 screws on the right side of the rewinder (looking at the rewinder from the front). There are 2 in the front and 2 in the back.



3. Remove the two screws holding the power switch plate in place.




4. Once the screws have been removed, move the power switch plate out of the way.



5. Inside this opening there is a spring and it is attached to one of the screw holes shown below.



6. Remove the screw. To reach the screw, the plate may need to be moved up. This can be done with the 4 screws removed from step 1 above.

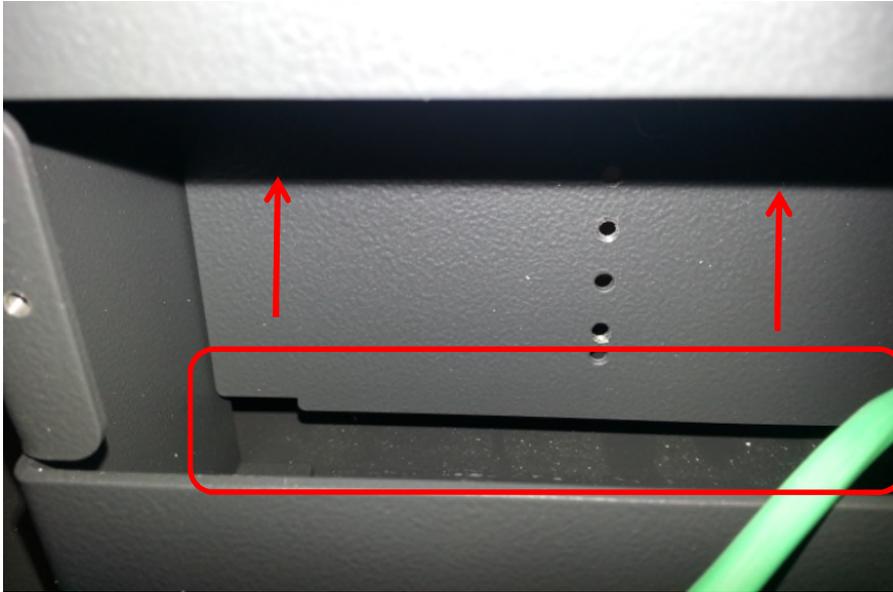

7. Once the screw is removed, the spring will only be connected at the top and will no longer be putting tension on the dancer arm.
8. Slide the inside plate back into place at the bottom of the rewinder.
9. Reinstall the 4 screws from step 1.
10. Reinstall the two screws from step 2.
11. Reconnect the power cable.


Left side – AC power cable / fuse side

1. Confirm power is turned off to the unit and disconnect the power cable from the rewinder.
2. Remove 3 screws on the left side of the rewinder (looking at the rewinder from the front).



3. Once the screws have been removed, remove the plate

4. Inside this opening there is a spring. Remove the nut at the bottom of the spring. Then remove the spring from the bottom post. The spring will be around a plastic housing.

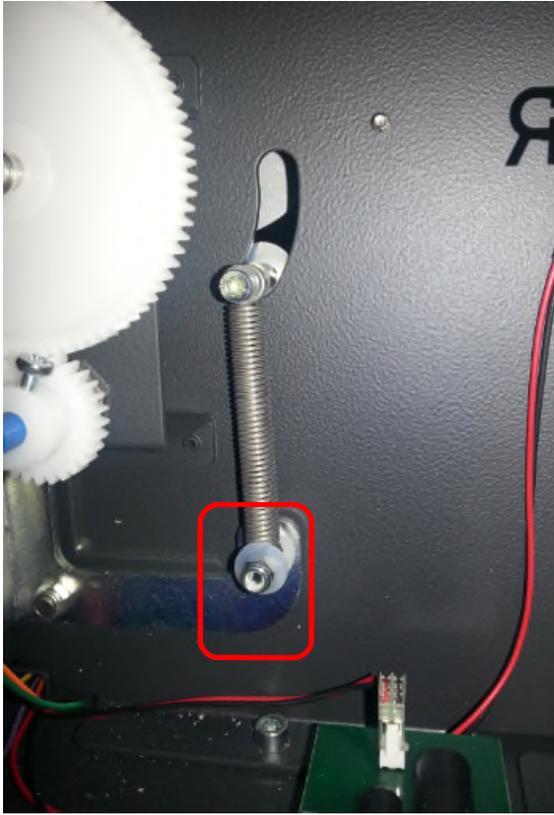

5. The spring will now be disconnected at the bottom.



6. Replace the cover and install the 3 screws.
7. Reconnect the power cable.