

## Colordyne 1600 Series – Driver and Firmware Update

 
Download the driver and firmware files from the Afinia Label website.

These instructions apply to both the 1600C and 1600S printers.

### Uninstall the existing driver


If you have several custom page sizes created in the current driver, export those first.

Open printing preferences for the 1600 series printer. Go to the Import/Export tab.

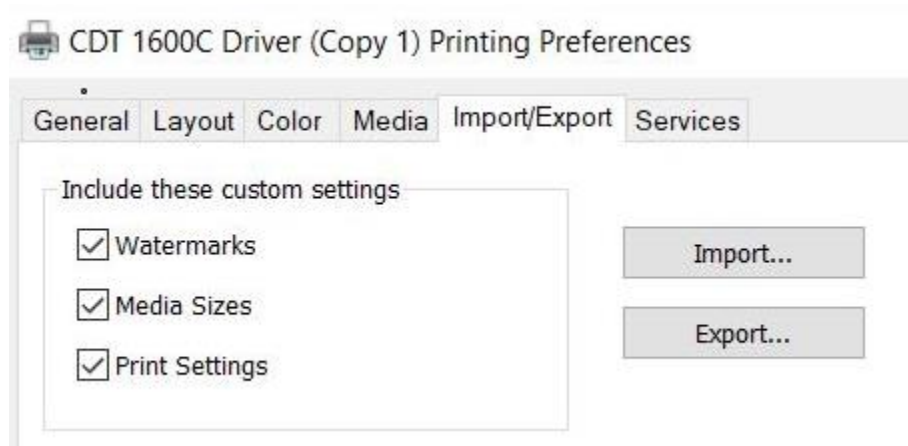

Select Export. Name and save the file. This file will be used to import the custom page sizes after the new driver is installed.

 Select CDT 1600 Uninstall from the program list under Colordyne.

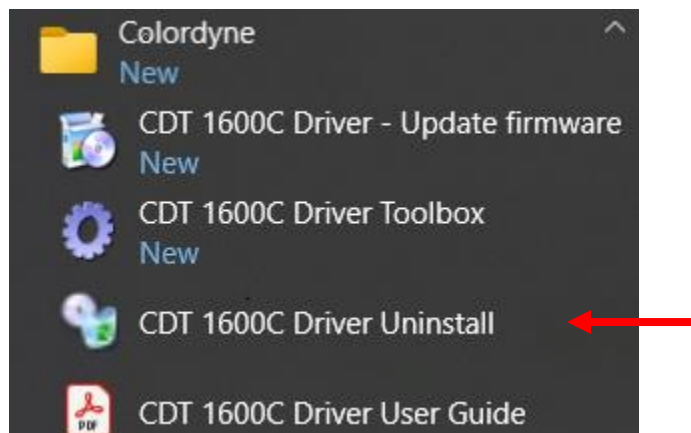

If it is not listed there, open Control Panel and select Programs and Features. Select CDT 1600 Driver and click uninstall.

### Uninstall or change a program

To uninstall a program, select it from the list and then click Uninstall, Change, or Repair.



 
Follow the screens to complete the uninstall. If the printer is connected via USB, it will need to be disconnected.

Reboot the PC when completed.

### Install the new driver

Browse to the location of the new driver that was downloaded.

Select WinSetup.exe

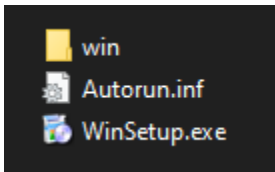


Follow the instructions on the screen to complete the driver installation.

Reboot the computer if that screen appears.


### Update firmware

 Open the CDT 1600 Series Toolbox

Under View, select User Interface

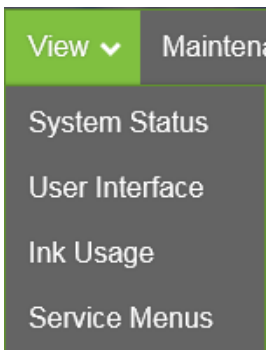

 Under Firmware Download select Choose File



Browse to the location of the downloaded firmware file.

Select the fbf file. The file location will show on the screen.

Click Submit.

The firmware will be uploaded to the printer. Status will be shown on the computer screen.

DO NOT power off the printer during the firmware update. This can damage the printer.

The printer will reboot after the update is completed.

The printer is now ready to use.