



AFINIA LABEL®

USER MANUAL

Label Rewinder
Afinia LT5C Label Printer

LABEL REWINDER



*Please keep the original packaging in case you need to return the unit.
If we receive the system in non-original packaging, the warranty may be void.*

INSTALLATION OF CORE HOLDER




STEP 1

Install the outer disc (if necessary)




STEP 2

Load the cardboard core onto the core holder.

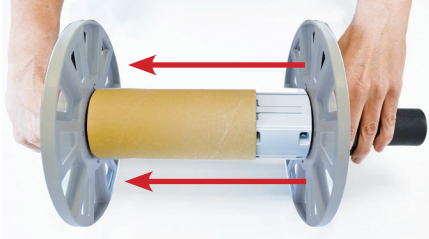

STEP 3

Insert outer disc.

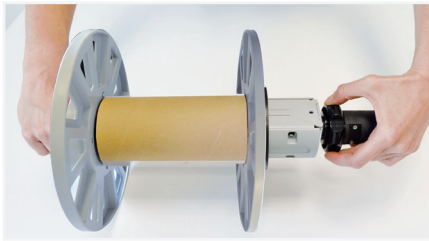

STEP 4

Screw the knob in order to tighten the roll.

Then lay the core holder onto the core holder supports.

IMPORTANT:

The core holder must be positioned with the black matching handle and gray matching handle.

Label Rewinder

A switching power supply, input of 1,8A 100-240Vac, 50-60Hz output of 24V $\overline{\text{---}}$ 2.5A, allows an electronic circuit to adjust the speed of rotation through the tension arm. A 2A fuse is used as system protection.



ATTENTION:

Due to the media cutting after each job printed by OKI printer, it is required first to "feed" enough media necessary to load the rewinder. Once the media is loaded properly, the system is ready to work.

HOW TO INSTALL THE PRINTER PLATE



STEP 1

To get the rewriter aligned to the printer, match the triangles on the second plate with the one onto the label rewriter.



STEP 2

Lock the printer plate onto the printer and fix the knob on the rewriter.

PAPER PATH



STEP 1


Pull the media under the tension arm and attach it to the cardboard core.

Switch on the unit. The label rewriter is ready.

WORKING CONDITIONS

- When the printer forwards the media for printing, the tension arm goes down, the device rewinds the printed media.
- When the unit is operating but the media is not loaded or it runs out, the tension arm reaches the lowest position and after few seconds the rewriter's rotation will be stopped while both leds blink and it beeps.

CONTROL PANEL

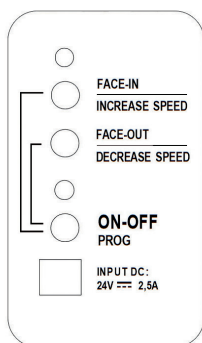

ON-OFF

Push this button to turn On or Off the unit.

INCREASE SPEED

Push this button to increase the rotation speed.

DECREASE SPEED

Push this button to decrease the rotation speed.

LABEL FACE-OUT

Turn the unit off. Keep pushed "FACE OUT" button, push and release "ON-OFF" button while the green led turns on and off. The unit is now ready to operate.

LABEL FACE-IN

Turn the unit off. Keep pushed "FACE IN" button, push and release "ON-OFF" button while the yellow led turns on and off. The unit is now ready to operate.